

February, 2008

CS7715A & CS8629A **Revised Service Instructions**

We will be including a revised service instruction sheet in the packaging for the CS7715A & CS8629A fuel filters, beginning in February, 2008.

When installing the CS7715A or the CS8629A fuel filters, the revised service instructions (below) should be followed.

Service Instructions

Fuel Filter Replacement Element and Lid

1. Remove housing lid and element.
*****Retain original equipment lid for use with OE filter*****
2. Remove and discard gasket and clean housing gasket sealing area.
3. Apply a coat of diesel fuel to the new gasket on the lid.
4. Install joined lid and element into the housing slowly, allowing fuel to soak into the element.
5. Use ½” socket driver to tighten the lid.
Note: Make sure installation torque is between 10 – 15 ft-lbs.

NOTE: For pictures illustrating the location of the gasket sealing area and the gasket on the lid, lines 2 and 3 above, reference pages 2 and 3 of this Information Bulletin.

Gasket Sealing Area



February, 2008

CS7715A & CS8629A Gasket Location

Apply Coat of
Diesel Fuel to
Gasket

